



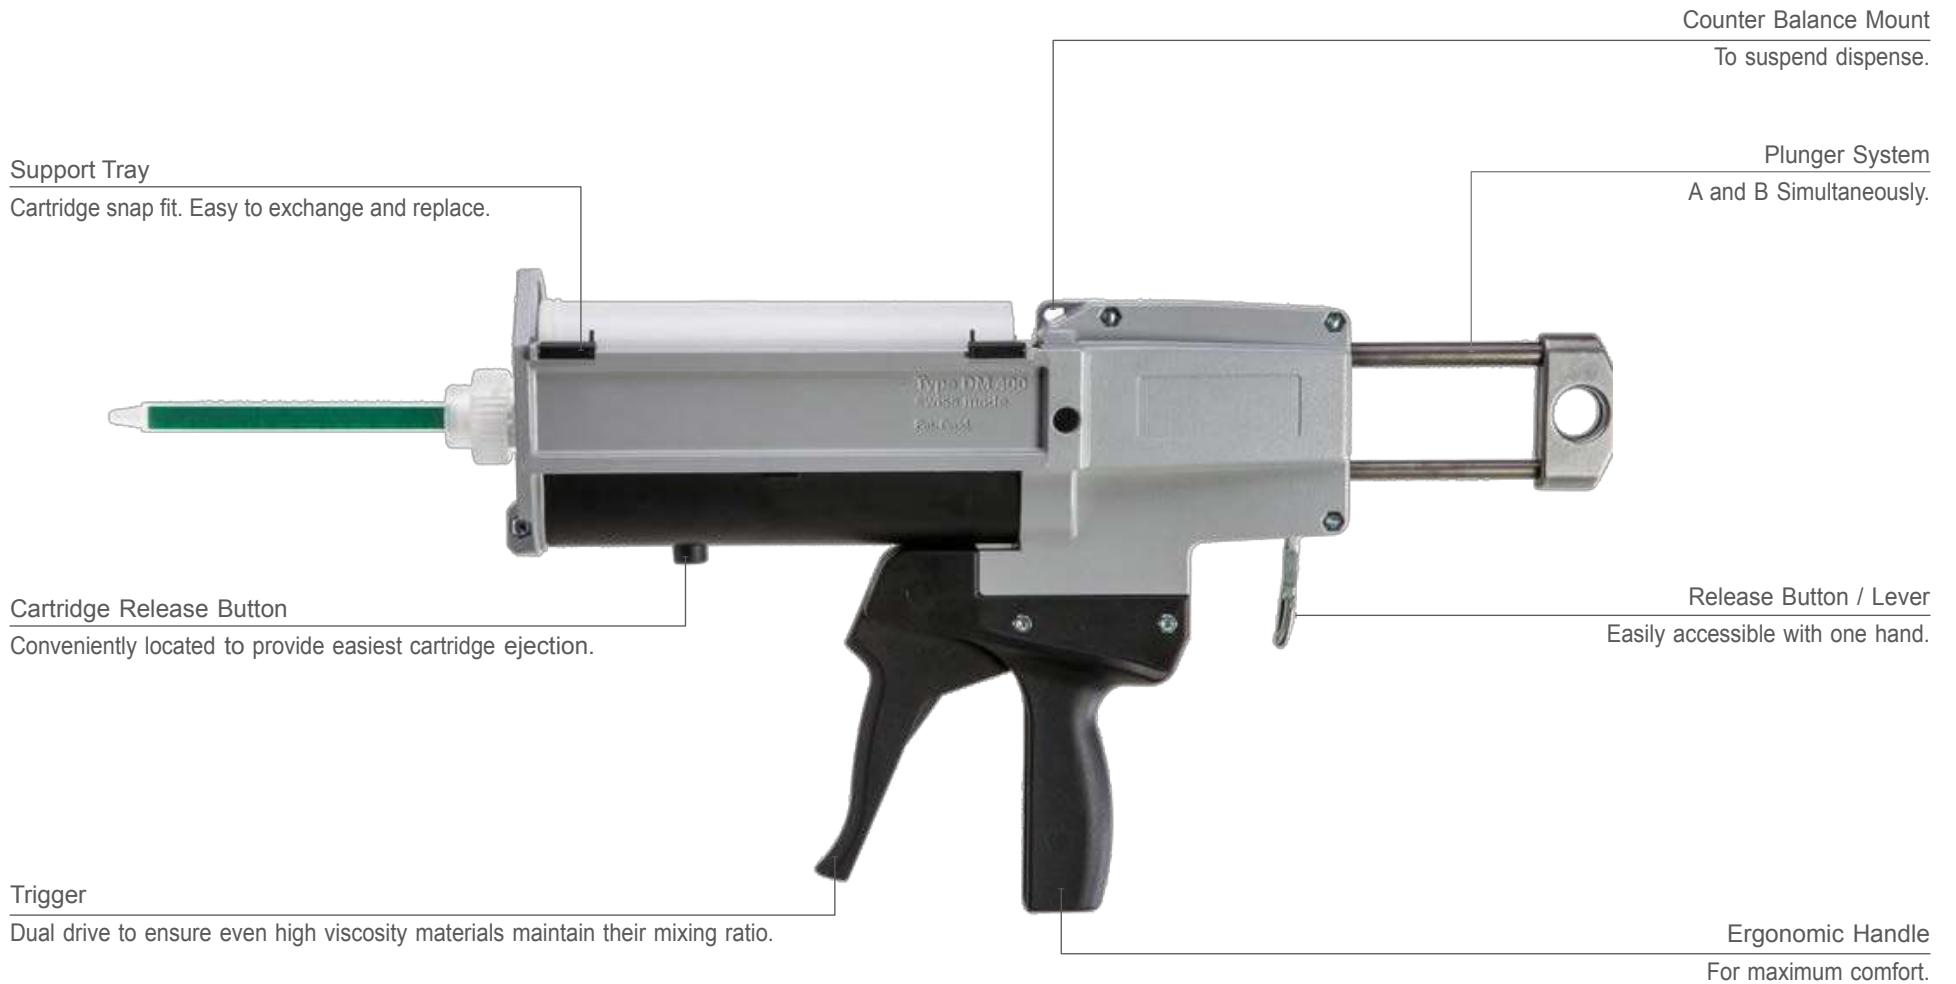

## EBS-2X DISPENSING GUN



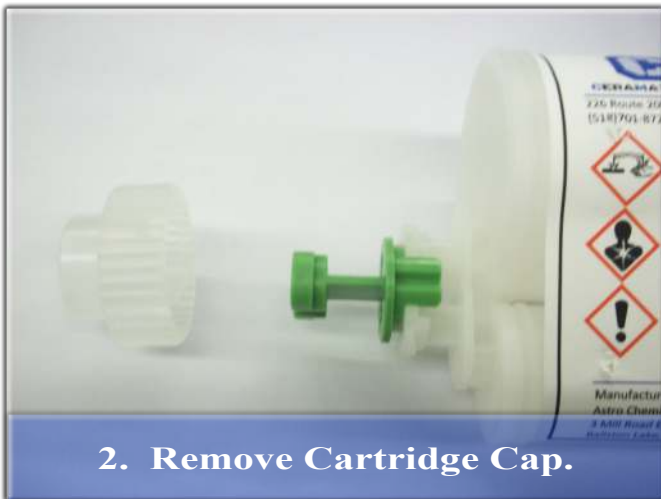






5. Secure cap to cartridge by tightening on the threads.



6. Move indicator needle to “4:1” position.

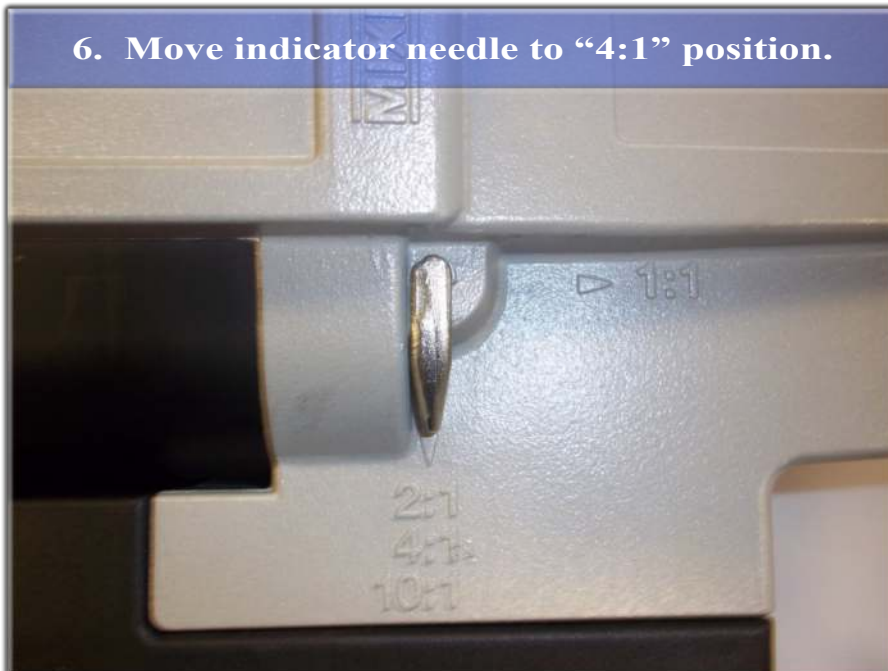

7. Hold release lever forward and pull plunger assembly completely out.







**8. Place cartridge in dispensing gun, small cartridge side goes down, and push down evenly.**




**9. Push cartridge completely in until it snaps into place.**




**Cartridge and dispensing gun ready to use. Dispense mix by squeezing trigger repeatedly. To release pressure, move the release lever forward.**

**Do not use the first 1.5-2.0" (4-5 cm) of the initial material when first dispensed from nozzle.**

sales@ceramaterials.com  
www.CeraMaterials.com  
SIZE: 400ml Side by Side Cartridge  
16039). Do not use first 1.5" of product

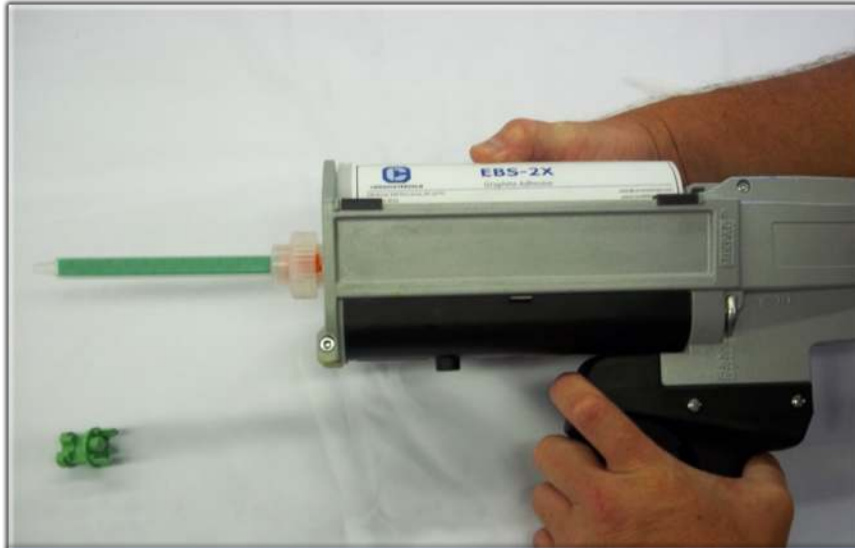

**10. To remove cartridge, release pressure by moving the release lever forward.**

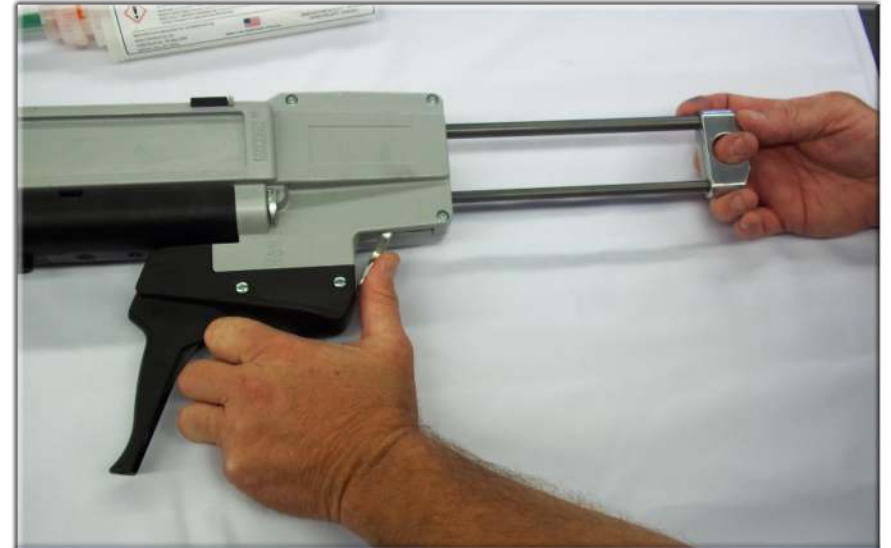

**11. Hold the release lever forward and pull the plunger completely out.**



**12. Push up on the cartridge release button to remove cartridge.**



13. Remove mixing nozzle.



14. Replace plug from step 3.



15. Replace cap on cartridge from step 2.

**Please note, the cartridges are designed to be resealed between uses. If a cartridge is not completely dispensed, it may be stored by removing the cap from the mix nozzle, removing the mix nozzle, replacing the plug and reattaching the cap by tightening to the threads.**

**Mix nozzles should be disposed of after each use.**